

MODEL CA-F22GF High Gain GP Antenna
for 120-175MHz

**Instruction
Manual**

Thank you for purchasing our products.

For your safety :


Read this manual carefully for proper handling and operation before using.
Keep this manual in a safe place for future reference.

【Features】

- High gain Base Station Antenna.
- Fiberglass with excellent weather resistance, waterproofing and high integrity.
- Resonance Frequency is adjustable, following to the cutting chart.


【Specifications】

Frequency Range : 120 - 175MHz
Gain : 5.5 dBi
Impedance : 50Ω
VSWR : 1.5 or less
Length : approx. 3.1m
Max Input Power : 150W(FM)
Weight : approx. 1.3kg
Mounting Mast Diameter : Φ30-62mm
Connector : M-J(Female) or N-J(Female)

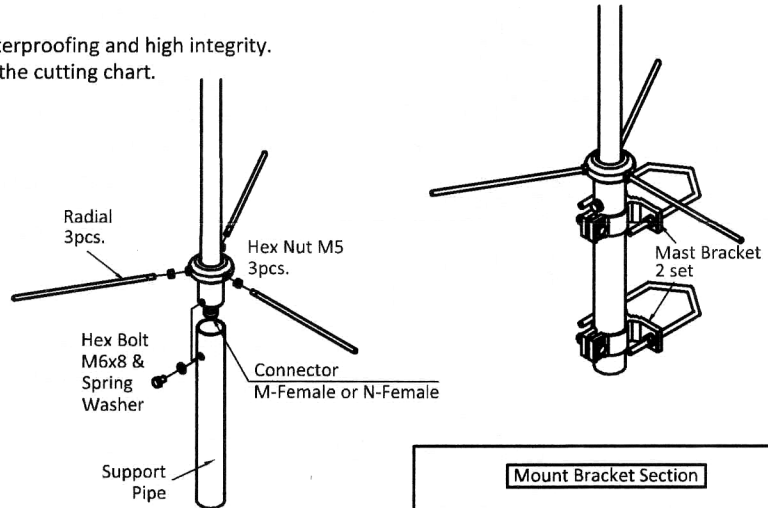


【How To Assemble】

1. Adjust Lower and Upper elements.
(refer on the reverse side of this paper)
2. Put Lower Lock into Upper Lock with a rubber washer in between.

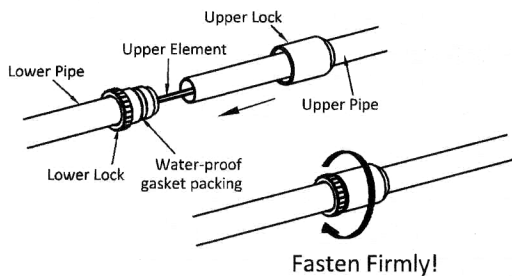


3. Assemble three radials. Fasten radial-lock nuts securely with spanner etc....

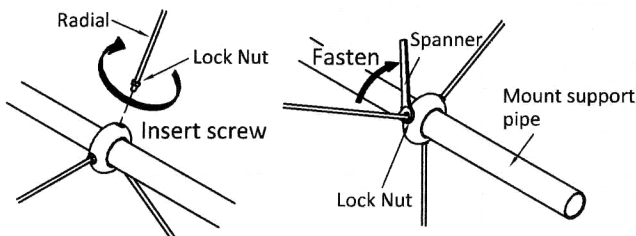


4. Put two mount brackets on the mount support pipe. Pass the coax cable through the pipe, and attach it to power feeding section. Be sure to fasten hex bolts firmly. Then, attach support pipe onto the antenna.

● **Accessory**
HEX Key Wrench

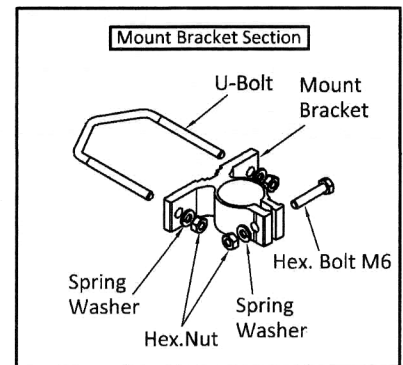

5. Mount all assembled antennas on your mast.
This antenna is so long. Keep your eyes on balance of this antenna and use as strong mast as you can, between 25 to 62mm dia.

*Make sure to use low loss coax cable.

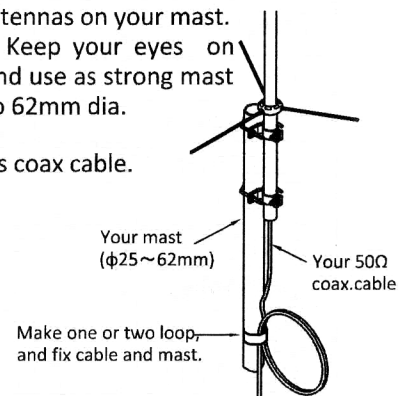

Parts List

1.Lower Element (with phase shifter)	...	1
2.Upper Element	...	1
3.Radial with Hex.Nut	...	3 sets
4.Power feed section	...	1
5.Hex.bolt with spring washer	...	1 set
6.Mount support pipe	...	1
7.Mount Bracket	...	2 sets
8.U-Bolt with spring washer and Hex.Nut	...	2 sets

■ Specifications or appearance is subject to change without notice.


Copyright (C) 2012 COMET CO.,LTD. All Rights Reserved.

COMET CO.,LTD.

4-18-2, Tsuji, Minami-ku, Saitama-shi, Saitama-Pref, 336-0026, JAPAN
TEL : 81-48-839-3131 / FAX : 81-48-839-3136
URL : <http://www.comet-ant.co.jp/english>

MODEL **CA-F22GF**

[How to adjust frequency 120-175MHz]

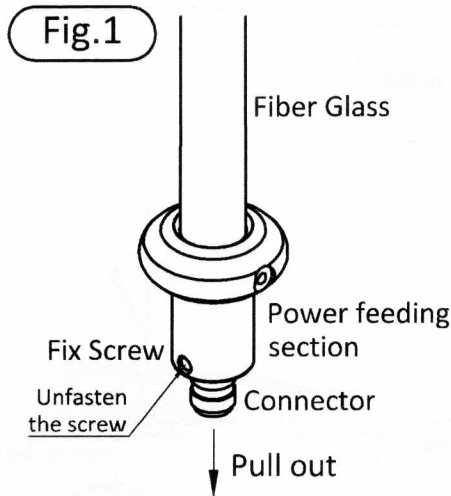

[1] Loosen fix screw at the bottom of Power Feeding section. (Fig.1)

[2] Pull out the entire wiring assembly, as shown in Fig.2

[3] Upper and lower elements are attached to the brackets at both ends of the coil.

Remove the hollow-set screws to disassemble elements.

[4] Adjust L1 and L2 length, following to the Adjustment Chart.


Below 150MHz, use Coil A(voluminous).

Above 150MHz, use Coil B.



After both length adjustment done, fasten all fix screw tightly.

[5] Put wiring assembly all the way into fiber element, and fasten fix screw tightly.

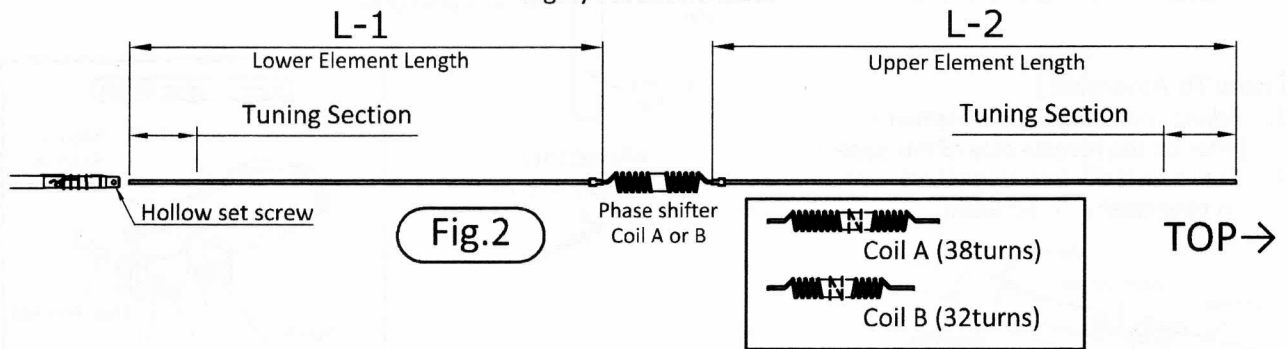[6] Prior to insertion, waterproofing silicone on the connector is highly recommended.



Element Adjustment chart

Frequency	L-1	L-2	Phase shift coil
120.0MHz	1160 mm	1436 mm	 Coil A (38turns)
125.0MHz	1060 mm	1340 mm	
130.0MHz	973 mm	1258 mm	
135.0MHz	899 mm	1185 mm	
140.0MHz	833 mm	1120 mm	
145.0MHz	776 mm	1062 mm	
150.0MHz	725 mm	1011 mm	
155.0MHz	674 mm	997 mm	 Coil B (32turns)
160.0MHz	627 mm	950 mm	
165.0MHz	586 mm	908 mm	
170.0MHz	551 mm	872 mm	
175.0MHz	520 mm	840 mm	

eNka s.c.

Al. Grzeczmarowskiego 2/404
 26-600 Radom, POLAND
 www.comet-ant.eu

■ Specifications or appearance is subject to change without notice.

4th Version.

Printed in JAPAN.

Copyright (C) 2012 COMET CO.,LTD. All Rights Reserved.